


1. Connect the Appliance to the display, to power, and the Internet as described in the manufacturer's instructions.
2. When first turned on, the Digital Signage Appliance will check for all necessary updates via the Internet. In that time, it may begin playing demonstration content.
3. Once updates are complete, the appliance will reboot then begin displaying demonstration content. In the top center of the presentation a 6 digit Appliance Locator Code is displayed. Please write it down.



4. From another PC, login to your account at www.risedisplaynetwork.com. If you do not have an account, simply visit www.risevision.com/createaccount and follow the on screen instructions.
5. Once logged in, navigate to the Display Tab and go to the Appliances page, and Click the Add button at the bottom left of the page.

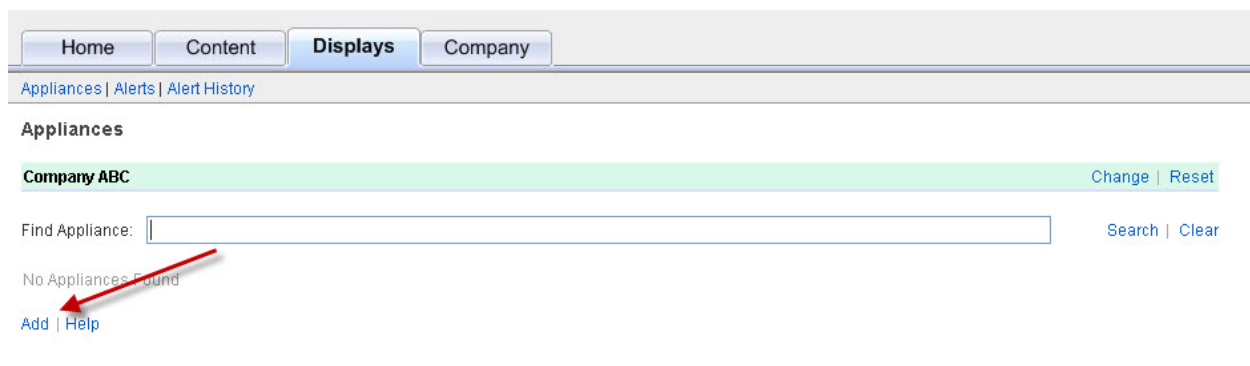

6. Enter your Appliance Locator code, then click Next. If the error Unknown Appliance Locator is displayed check your O vs. zeros and I's vs. ones and try again.

Home Content Displays Company

Register Appliance

Register an Appliance and personalize your content. Once registered, you can create and show a personalized Presentation on the Appliance and its associated display(s) for a 30 day trial period. At the end of the 30 day trial, the Appliance will return to showing the demonstration Presentation unless you [subscribe](#) earlier.

In order to register an Appliance, the Rise Player software must be installed and running on the Appliance. If Rise Player has not already been installed, [click here](#) to download it. The installation of Rise Player assigns the Appliance a unique Appliance Locator code that is required to register the Appliance. This code is displayed when the computer starts up and in the demonstration Presentation content. You can also access it from Start > Programs > Rise Vision > Rise Player Appliance Locator.

Appliance Locator: [What's this?](#)

(example: 7D2E-1)

Click **Next** to complete the registration process. Once the Appliance has been successfully registered you will select the Presentation that you want to show on it.

[Next](#) | [Cancel](#) | [Help](#)

7. In the Appliance Name field, type a unique name for the Appliance. The name used must be unique within the Network. Fill out the rest of the form and click Register.

Home Content Displays Company

Register Appliance

We have found a computer that is currently showing demonstration content and it has the Appliance Locator code that you entered. We need more information about this computer and its associated display to complete the setup and to pick a Presentation template for it.

Please give this computer a unique name that will allow you to easily identify it and find it later:

Appliance Name*: [What's this?](#)

If your computer has a TV Tuner, please indicate what type it is:

TV Tuner: [What's this?](#)

Tell us where your computer is located:

Location:

Use Company Address:

Address:

Unit:

City:

Country*:

State:

ZIP Code*:

Time Zone*:

Location Id:

Once the above is complete please click Register and you will then pick a Presentation template for your displays content.

[Register](#) | [Cancel](#) | [Help](#)

8. On the Register Appliance confirmation page, click Choose Presentation to select and customize the Presentation you want to show on the appliance.

Need more help? See our Learning Center at www.risevision.com/support